



Windows 기반 HMI Software 설치 가이드
XGT Panel
 wXP
 wXP/XPC



이 설치 가이드는 wXP 설치를 위한 간략한 동작 설명을 제공합니다. 제품에 대한 사용법 및 상세 내용을 확인하기 위해서는 사용설명서를 참고해 주시길 바랍니다.

1 설치 환경

- Processor: Pentium 4이상
- RAM: 512MB 이상
- HDD: 1GB 이상
- OS: Windows 7 이상

2 제품 구성

- 제품 인증용 USB Lock Key



3 제품 인증


- 제품 인증은 USB Lock key로 적용 됩니다.
- USB Lock key가 없을 경우 3시간 동안 데모 모드로 운전되며, 이후 동작이 종료 됩니다

4 설치 방법

- 1) 서비스로 제공 된 USB 안의 설치 파일을 실행합니다.
 (경로 예: 컴퓨터\이동식 디스크(F:)\wXP.exe)
 또는 LS ELECTRIC 홈페이지에서 다운로드 가능합니다.




- 2) 설치 언어를 선택 후 확인을 클릭 합니다.

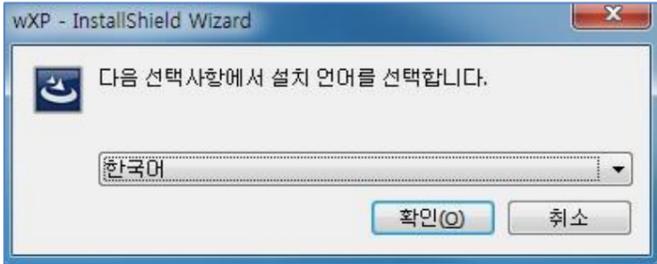


- 3) 아래와 같이 설치 마법사가 설치를 준비합니다.



- 4) 사용자 정보를 입력하는 화면에서 사용자에게 대한 정보를 지정하고 [다음] 단추를 눌러 설치를 계속합니다.

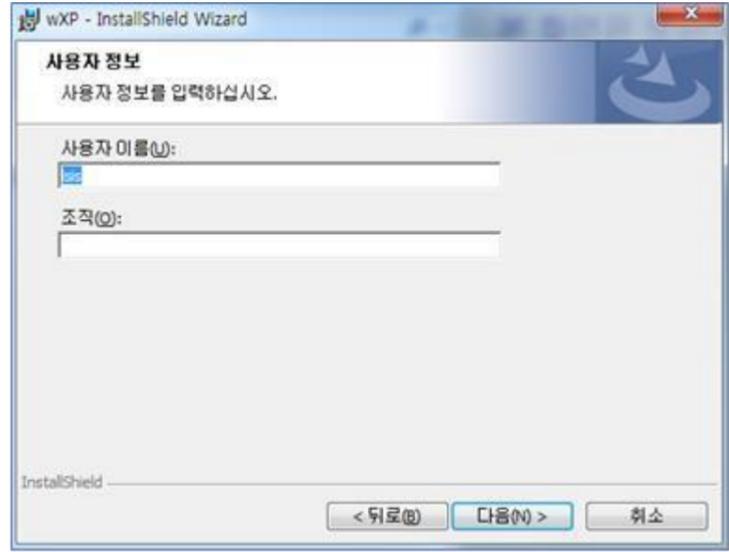

- 5) wXP가 설치될 폴더 위치를 지정 후 [다음] 단추를 클릭 합니다.
 이때, wXP가 설치되기 위해서는 100Mbyte의 설치 공간이 필요합니다.

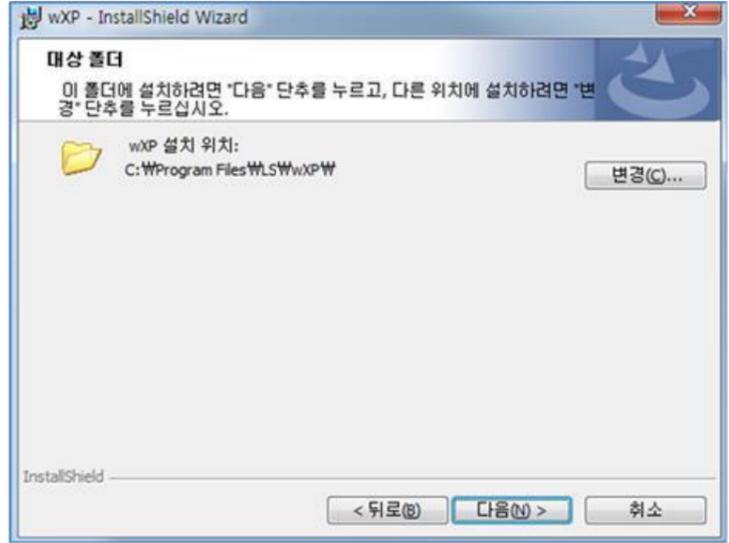

- 6) 정상적으로 설치가 완료되었을 경우 아래와 같이 설치 완료 창이 생성됩니다.
 [마침]을 클릭하면 설치가 종료 됩니다.



5 보증 내용

- 보증 기간
 구입하신 제품의 보증 기간은 제조일로부터 18개월입니다.
- 보증 외 범위
 - 1) 사용설명서에 명기된 이외의 부적당한 조건.환경.취급으로 발생한 경우
 - 2) 고장의 원인이 당사의 제품 이외의 것으로 발생한 경우
 - 3) 당사와 당사가 정한 지정점 이외의 장소에서 개조와 수리를 한 경우
 - 4) 제품 본래의 사용 방법이 아닌 경우
 - 5) 당사에서 출하 시 과학.기술의 수준에서는 예상이 불가능한 사유에 의한 경우
 - 6) 기타 천재.화재 등 당사 측에 책임이 없는 경우
- 제품 규격의 변경
 제품 성능 개선을 위해 설치가이드의 내용은 사전 예고 없이 변경될 수 있습니다.

LS ELECTRIC Co., Ltd. www.lselectric.co.kr 10310001632 V1.1 (2020.4)



- 서비스 대표 전화 (전국 어디서나)
1544-2080
- 구입 문의

서울영업	TEL:(02)2034-4623~38	FAX:(02)2034-4057
부산영업	TEL:(051)310-6855~60	FAX:(051)310-6851
대구영업	TEL:(053)603-7741~8	FAX:(053)603-7788
서부영업(광주)	TEL:(062)510-1891~92	FAX:(062)526-3262
서부영업(대전)	TEL:(042)820-4240~42	FAX:(042)820-4298



■ 제조사(공장): 충남 천안시 동남구 목천읍 삼성4길 56 (우 31226).



This installation guide provides simple function information of wXP. Please read carefully this data sheet and manuals before using products. Especially read safety precautions and handle the products properly.

1 Installation Environment

- Processor : Pentium 4 above
- RAM: 512MB above
- HDD : 1GB above
- OS : Windows 7 above

2 Use of environment

- USB Lock key for product certification

< USB for wXP installation > < License USB > < Installation Guide >



3 Product Composition

- Product certification is checked by USB Lock key
- If there is no USB Lock key, it will be operated in demo mode, operation will be terminated after 3 hours.

4 How to Install

- 1) Run the installation file in the USB provided as a service. (Path example: Computer\USB Disk(F:)\wXP.exe) It can be downloaded from LS ELECTRIC website.




- 2) Select the language for the installation and click the [OK] button.




- 3) The install Shield Wizard is preparing for the installation as shown below.




- 4) Entering customer information and click the [Next] button.

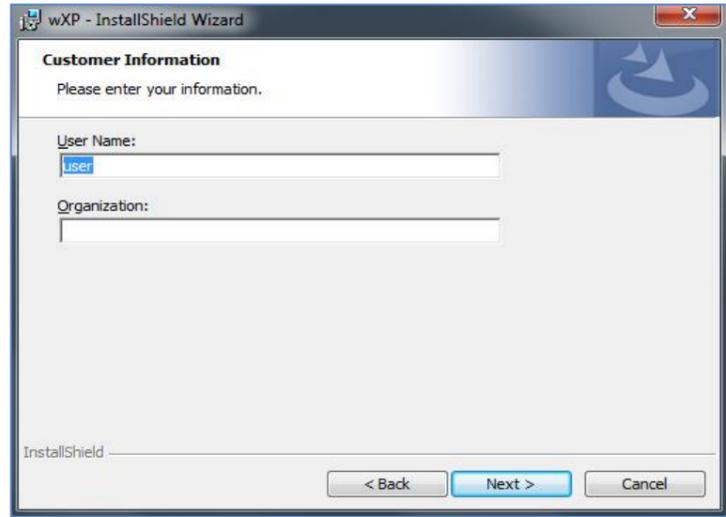

- 5) Select the destination folder to install wXP and click the [Next] button. (100Mbyte of space is required for wXP to be installed.)

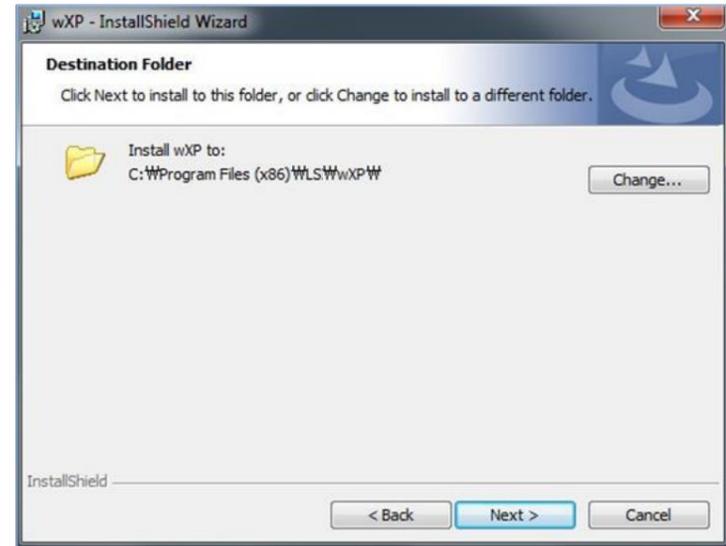

- 6) If wXP has been successfully installed, the following message appears. Then, Click the [Finish] button to end the installation.

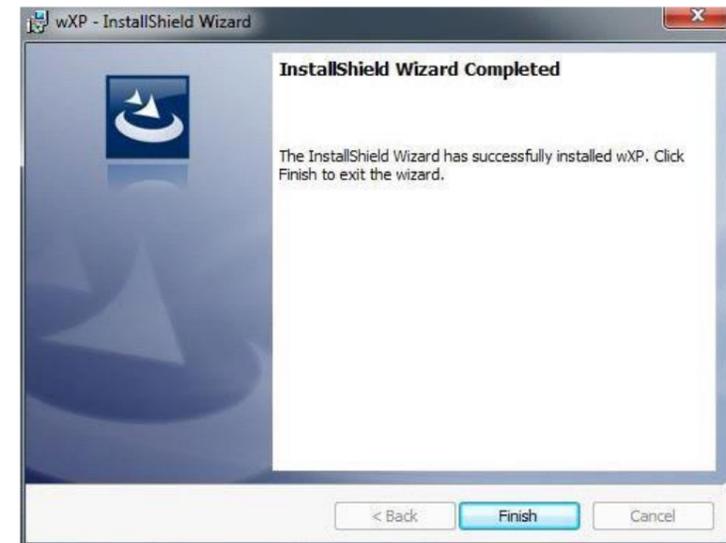

5 Warranty

- Warranty period: 18 months after the production date.
- Scope of Warranty
 - 18-month warranty is available except:
 - 1) The troubles caused by improper condition, environment or treatment except the instructions of LS ELECTRIC.
 - 2) The troubles caused by external devices.
 - 3) The troubles caused by remodeling or repairing based on the user's own discretion.
 - 4) The troubles caused by improper usage of the product.
 - 5) The troubles caused by the reason which exceeded the expectation from science and technology level when LS ELECTRIC manufactured the product.
 - 6) The troubles caused by natural disaster.
- Change in specifications
 - Product specifications are subject to change without notice due to continuous product development and improvement.

LS ELECTRIC Co., Ltd. www.lselectric.co.kr 10310001278 V5.2 (2020.4)

E-mail: automation@lselectric.co.kr



• Headquarter/Seoul Office	Tel: 82-2-2034-4033,4888,4703
• LS ELECTRIC Shanghai Office (China)	Tel: 86-21-5237-9977
• LS ELECTRIC (Wuxi) Co., Ltd. (Wuxi, China)	Tel: 86-510-6851-6666
• LS-ELECTRIC Vietnam Co., Ltd. (Hanoi, Vietnam)	Tel: 84-93-631-4099
• LS ELECTRIC Middle East FZE (Dubai, U.A.E.)	Tel: 971-4-886-5360
• LS ELECTRIC Europe B.V. (Hoofddorf, Netherlands)	Tel: 31-20-654-1424
• LS ELECTRIC Japan Co., Ltd. (Tokyo, Japan)	Tel: 81-3-6268-8241
• LS ELECTRIC America Inc. (Chicago, USA)	Tel: 1-800-891-2941

• Factory: 56, Samseong 4-gil, Mokcheon-eup, Dongnam-gu, Cheonan-si, Chungcheongnam-do, 31226, Korea